





Jet Removal and Replacement Procedure

Tools required: none

Before you begin, read and understand all steps of the procedure before beginning so as to familiarize yourself with what is required. Use common sense and always work safe.

1	<p>Turn electrical power off to your spa by turning off its GFCI breaker.</p> <p>Note: It is recommended that you lock this GFCI breaker box so that no one can accidentally turn the power back on while you are working.</p>	
2	<p>Grasp the water jet and rotate counter-clockwise until you feel it turn freely. Stop turning the jet and pull it out of the jet body.</p> <p>Note: Only water jets can be removed in this manner. Air-only jets are a one-piece assembly and must be removed from the rear. See jet bodies for more information.</p> <p>CAUTION: If you do not feel a click after rotating a jet fully counter-clockwise, it is most likely an air-only jet. Do not try to remove an air-only jet as you would a water jet; doing so can permanently damage this jet.</p>	
3	<p>Align the pin on the jet with the slot on the body and insert a new water jet into the jet body. Grasp the water jet while pushing in and rotate it clockwise until you feel it stop.</p>	
4	<p>Turn on the GFCI breaker</p>	
5	<p>Wait 2 minutes while the spa pack resets. Turn on Pump 1 and turn the jet counter-clockwise until it is set at the desired pressure level.</p>	